








Function LED Colo	()FF	ON	BLINKING
LINE	N/A	VDSL2 or ADSL line(s) connected to the CO, 1 line at least	A/VDSL2 physical layer set up or failed connection (no line)
INTERNET	Bridged mode or no xDSL connection	WAN line connected, no IP traffic	Connected line and In/Out IP traffic over the WAN
		Connected line. Waiting for receiving the gateway address from IPCP or DHCP server on the WAN	N/A
WIFI	WIRELESS interface is down	WIRELESS service activated	In/Out WIRELESS IP traffic
ETH1	No device connected	Ethernet device connected to the port	In/Out IP traffic on the WAN
ETH0 1, 2, 3, 4	No device connected	Ethernet device connected to the port	In/Out IP traffic on the LAN
USB 1,2	No device connected	Device connected and recognized	Device under recognition phase. If the flash persists, the device does not work properly
BRI 1, 2, 3, 4	Line unregistered to the SIP server	Line registered to the SIP server	N/A
FXS 1, 2, 3 , 4	Line unregistered to the SIP server	Line registered to the SIP server	N/A
MODULE	N/A	N/A	N/A
POWER	CPE turned off	CPE turned on, completed startup	CPE startup after turning on or restart





# Connectors, Pin-out, Cables

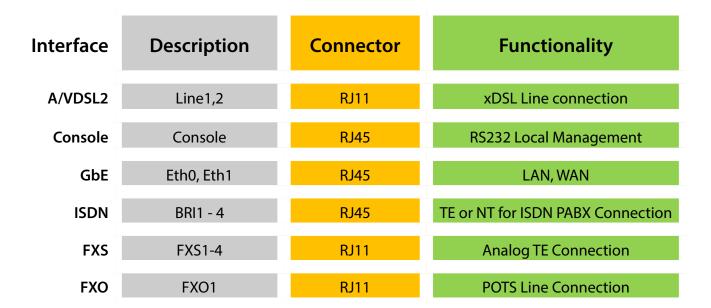


BRI ISDN Cable straight NT configuration

N



BRI ISDN Cable cross TE configuration

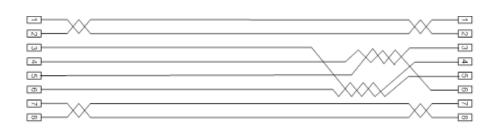



### **Console Port**

Pin 1,2,7,8: Non connected

Pin 3: TX

Pin 4,5: Ground

Pin 6: RX

# **BRI ISDN Ports**

Pin 1,2,7,8: Non connected

*Pin 3:* Rx (+)

*Pin 4:* Tx (+)

*Pin 5:* Tx (-)

*Pin 6:* Rx (-)

Note: Console Port in "Aux" working mode, use RJ45-RJ45 cable with inverted pin (1-8, 2-7, 3-6, 4-5)

RJ 45 Pin - out



## **GbE Ports**

*Pin 1:* White orange

Pin 3: White green

Pin 4: Blu

Pin 5: White blu

Pin 6: Green

Pin 7 White brown

Pin 8 Brown

### A/VDSL2 Port

Pin 1,2,5,6 Non connected

*Pin 3,4* Connected

# **FXS/FXO1 Ports**

*Pin 1,2,5,6* Non connected

Pin 3,4 Connected



**RJ11 Pin - out**